




ULTIUM POWER BAR & ULTIUM POWER BAR+
USER INSTRUCTIONS

ULTIUM POWER BAR & ULTIUM POWER BAR+
INSTRUCTIONS D'UTILISATION

ULTIUM POWER BAR & ULTIUM POWER BAR+
INSTRUCCIONES PARA EL USUARIO

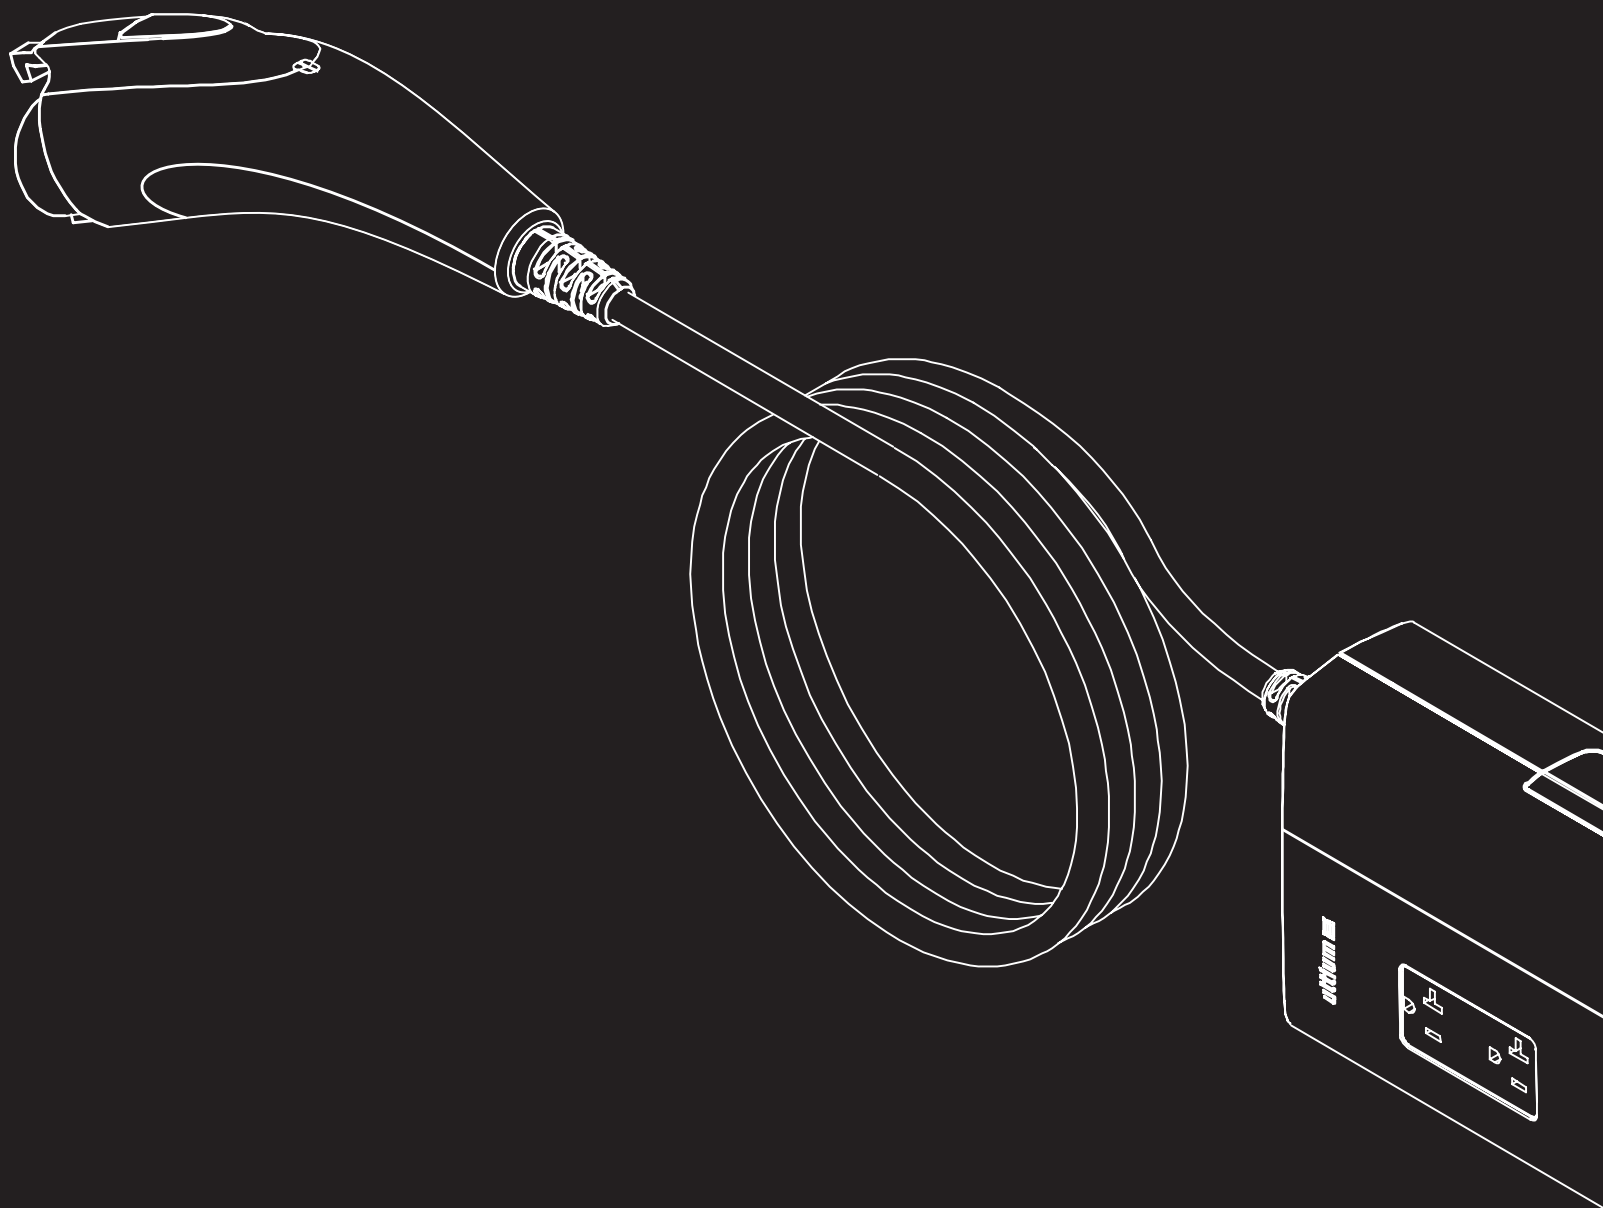

⚠WARNING: RISK OF FIRE OR ELECTRICAL SHOCK. Carefully read and follow all of the instructions and precautions in these user instructions.

⚠AVERTISSEMENT: RISQUE D'INCENDIE OU DE CHOC ÉLECTRIQUE. Lisez attentivement et suivez toutes les instructions et précautions contenues dans ces instructions d'utilisation.

⚠ADVERTENCIA: RIESGO DE INCENDIO O DESCARGA ELÉCTRICA. Lea atentamente y siga todas las instrucciones y precauciones de estas instrucciones de uso.

1. SAFETY


This manual describes features that may or may not be on the vehicle because of optional equipment that was not purchased on the vehicle, model variants, country specifications, features/application that may not be available in your region, or changes subsequent to the printing of this owner's manual, including changes in standard or optional content. Refer to the purchase documentation relating to your specific vehicle to confirm the features. Keep this manual in the vehicle for quick reference.

- ⚠WARNING:** Read all the instructions before using the Ultium Power Bar / Power Bar+. Illustrations provided are for representation purposes only.
- ⚠WARNING:** When using electric products, all precautions must be followed.
- ⚠WARNING:** DO NOT attempt to use if the equipment appears damaged. DO NOT attempt to carry out a repair, contact GM customer/repair service.
- ⚠WARNING:** DO NOT put your finger or any object into the electric connector.
- ⚠WARNING:** DO NOT leave the Ultium Power Bar / Power Bar+ and/or power cords on heated surfaces.
- ⚠WARNING:** DO NOT cover the Ultium Power Bar / Power Bar+ during operation. Covering the unit can CAUSE A FIRE.
- ⚠WARNING:** DO NOT use the Ultium Power Bar / Power Bar+ when closer than 20ft (6.1m) of a motor fuel dispensing device. Risk of sparks/arcing can CAUSE A FIRE


- ⚠WARNING:** DO NOT let the Ultium Power Bar / Power Bar+ fall to the floor, or become submerged in liquid.
- ⚠WARNING:** NOT intended for use in damp and wet locations.
- ⚠CAUTION:** The Ultium Power Bar / Power Bar+ operating temperature should be between -22°F and +122°F (-30°C and +50°C).
- ⚠CAUTION:** The Ultium Power Bar / Power Bar+ should be supervised when used around children.
- ⚠CAUTION:** If your vehicle suffered damage or an accident, DO NOT use the Ultium Power Bar / Power Bar+.
- ⚠CAUTION:** To reduce risk of damage to electric plugs and cords, pull by the plug rather than cord when disconnecting the Ultium Power Bar / Power Bar+.



2. SPECIFICATION

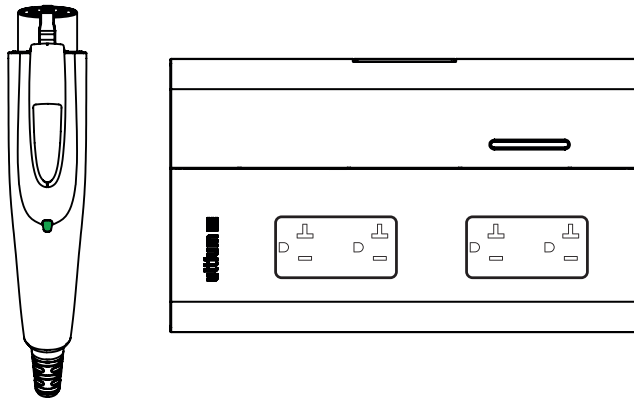ULTIUM POWER BAR
(PN:84942991)

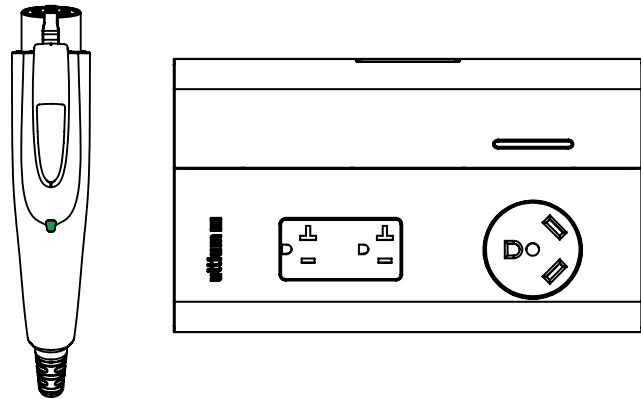

ULTIUM POWER BAR+
(PN:84974434)






MODEL	EV CONNECTOR	OUTLET 1	OUTLET 2	GFCI	CORD LENGTH	IMAGE
ULTIUM POWER BAR (PN:84942991)	Type 1	NEMA 5-20, 120 VAC, 20 A	NEMA 5-20, 120 VAC, 20 A	Yes	15ft (4.5m)	
ULTIUM POWER BAR+ (PN:84974434)	Type 1	NEMA 5-20, 120 VAC, 20 A	NEMA TT-30, 120 VAC, 30 A	Yes	25ft (7.6m)	


Note: The OBCM-2 (On-Board Charging Module) is limited to 25 amps max power (3 kW at 120 V)

R 10MAY23					PART No. 84942993	SHEET
ALL INFORMATION WITHIN ABOVE BORDER TO BE PRINTED EXACTLY AS SHOWN ON 8.5 x 11 WHITE 16 POUND NON-BOND RECYCLABLE PAPER. PRINT ON BOTH SIDES, EXCLUDING TEMPLATES. TO BE UNITED IN ACCORDANCE WITH GMCCA SPECIFICATIONS.	Date	Revision	Auth	DR	Title Ultium Power Bar & Ultium Power Bar+ User Instructions	
	10MAY23	First Rel	SAR/VN	HR		
						PART No.

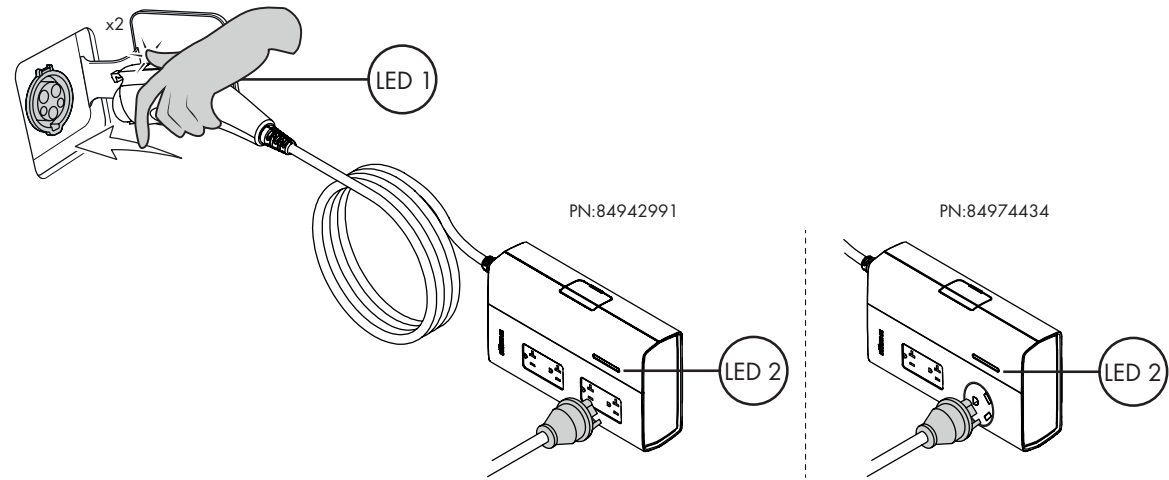3. OPERATING INSTRUCTIONS




1. Vehicle Starting Procedure
 Shift the vehicle to P (Park) or N (Neutral). The propulsion system will not start in any other position.
 The Remote Keyless Entry (RKE) transmitter must be in the vehicle.
 Press the brake pedal, then press and release the POWER 
 A vehicle ready light is displayed in the instrument cluster when the vehicle is ready to be driven 

Vehicle Stopping Procedure
 To turn the vehicle off, apply the brakes, press the P (Park) switch on the center console and press POWER 


Note: Refer to Vehicle Owners Manual for additional information on Starting/Stopping Procedure's

- Insert Ultium Power Bar or Power Bar+ connector into the vehicle charging port.
- While the vehicle is powered on, double-press the button on the Type 1 connector to enable power from vehicle to the Ultium Power Bar or Power Bar+, the device will perform a calibration check shown on the LED indicator (1.)


Note: connection to the vehicle can take a few seconds.

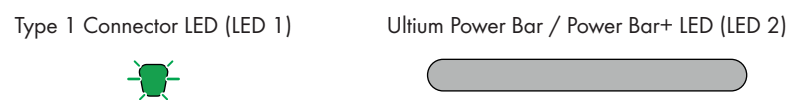

If the LED indicator on the Type 1 connector is green and Ultium Power Bar or Power Bar+ unit is white; the device is ready for use and devices can be connected to the Ultium Power Bar or Power Bar+.

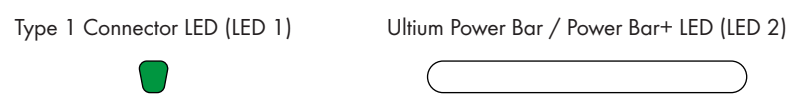


- To disconnect, double-press the button on the Type 1 connector to disable power from vehicle and wait for both LED indicators to turn off as shown.

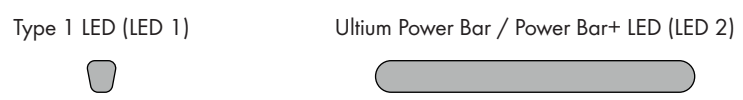

R 10MAY23					PART No. 84942993	SHEET
ALL INFORMATION WITHIN ABOVE BORDER TO BE PRINTED EXACTLY AS SHOWN ON 8.5 x 11 WHITE 16 POUND NON-BOND RECYCLABLE PAPER. PRINT ON BOTH SIDES, EXCLUDING TEMPLATES. TO BE UNITED IN ACCORDANCE WITH GMCCA SPECIFICATIONS.	Date	Revision	Auth	DR	Title Ultium Power Bar & Ultium Power Bar+ User Instructions	
	10MAY23	First Rel	SAR/VN	HR		
						PART No.

4. INDICATOR OVERVIEW

The Ultium Power Bar & Ultium Power Bar+ are equipped with two LED indicators; located on the front of the Type 1 connector (LED 1) and the unit (LED 2) which displays correct operation or errors.

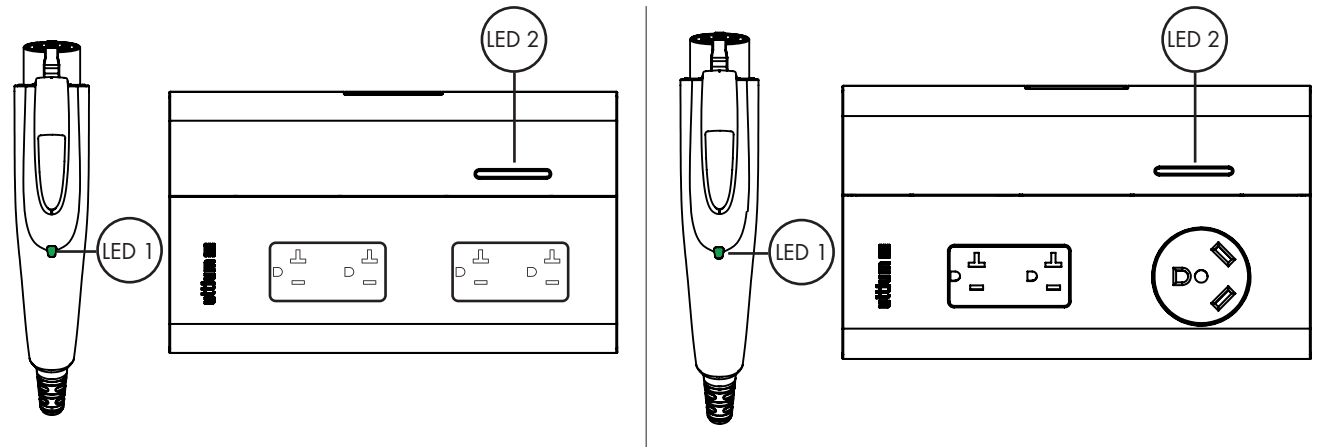

FUNCTION	DESCRIPTION	LED 1	LED 2	ACTION
CALIBRATION	Type 1 connector flashing green			No action required, allow the device to calibrate before normal operation.
POWER	Power is ON, calibration OK			No action required, device is functional
	Power is NOT on, no LED's active			No power supplied to the Ultium Power Bar / Power Bar+. Confirm that the Type 1 connector is properly connected to the EV outlet. Refer to the vehicle owners manual for further troubleshooting.
ERROR	Power ON, circuit breaker tripped, LED 2 not active			Power available from the EV as indicated on LED 1. Circuit breaker has tripped in the Ultium Power Bar / Power Bar+ unit. To reset the circuit breaker: unlatch and lift the cover lid on the side of the Ultium Power Bar / Power Bar+ unit (1) → push the reset switch(es) in the direction shown (2).
	Manually resettable error / calibration failed or non-resettable error, solid red			Disconnect the Ultium Power Bar / Power Bar+ unit. Repeat '2. OPERATING INSTRUCTIONS; Steps 1-3' and confirm the error has cleared. If the error is still present after 3 attempts, contact GM customer/repair service.
	Overheating error			Ultium Power Bar / Power Bar+ is overheated. Disconnect from the vehicle and allow the unit to cool down before use.



ACCESSORIES

5. SUPPORT

For support, FAQ, latest revised manual and more information about GM product visit GM's website or contact GM.

	EV Chevrolet/Buick/GMC Concierge	EV Cadillac Concierge	EV Hummer Concierge
US*	1-833-382-4389	1-844-382-2345	1-833-486-6373
CANADA**	1-833-382-4389	1-844-382-2345	1-833-486-6373

* Hours of Operation: Monday - Friday 8am - 12am EST; Saturday - Sunday 12pm - 9pm EST

** Hours of Operation: Monday - Friday 8am - 9pm EST; Saturday 8am - 5pm EST, Sunday Closed

6. LIMITED WARRANTY

General Motors issues a limited warranty to the original purchaser of the product. This limited warranty is not transferable. The warranty applies to manufacturing faults and material defects. The customer must return the product for inspection together with the receipt of purchase to a GM Dealer. GM will repair or replace the part, at its sole discretion and at no charge, if the part fails due to a defect in material or workmanship during the warranty coverage period.

PRODUCT	WARRANTY PERIOD
Ultium Power Bar / Power Bar+	3 years ¹

This Warranty Does Not Cover:

- Damage or failure due to negligence, alteration, accident, abuse, improper installation, or use for a purpose which the product is not designed or approved by GM
- Loss of time, inconvenience, loss of use of the vehicle, or other consequential damages
- Labor cost for electrical diagnosis, removal or installation
- Products utilized for vehicles registered and normally operated outside of the United States or Canada

Other Terms:

Any implied warranty of merchantability or fitness for a particular purpose applicable to these parts is limited in duration to that of this written warranty. The remedy provided above is the exclusive remedy under this written warranty or any implied warranty. Some states do not allow any limitation on the duration of an implied warranty or the exclusion or limitation of incidental or consequential damages; therefore, the above limitations or exclusions may not apply to you. This warranty provides specific legal rights; you may also have other rights, depending on the state or province in which you reside.

¹ Subsequent replacements under the warranty will receive the balance of the original warranty period.

R 10MAY23					PART No. 84942993	SHEET
<small>ALL INFORMATION WITHIN ABOVE BORDER TO BE PRINTED EXACTLY AS SHOWN ON 8.5 X 11 WHITE 16 POUND NON-BOND RECYCLABLE PAPER. PRINT ON BOTH SIDES, EXCLUDING TEMPLATES. TO BE UNITED IN ACCORDANCE WITH GMCCA SPECIFICATIONS.</small>	Date	Revision	Auth	DR	Title Ultium Power Bar & Ultium Power Bar+ User Instructions	
	10MAY23	First Rel	SAR/VN	HR		
						PART No.



www.gm.com



50028314